	ENGLISH (Translated from Italian)	ENGLI	SH (Translated from Italian)	ENGLIS	H (Translated from Italian)	EN
_A 1	TABLE OF CONTENTS	C2	NTENDED USE		THE PUMP IS EQUIPPED WITH PROTECTION AGAINST	14
	LE OF CONTENTS	INTENDED USE	THE DETERMINATION OF THE AREAS (ZONES) IS TO BE CARRIED OUT BY THE USER	L	OVERHEATING AND OVERLOAD RISKS. SHOULD SUCH DEVICES ACTIVATE, THE PUMP SHUTS DOWN AUTO-	
IDEN	L'HIRE AND MANUFACTURER ITIFICATION L'INE DESCRIPTION	FORBIDDEN USE	Using the appliance for fluids other than those listed at paragraph "L4 – Fluids permitted" and for uses other than those described at		MATICALLY, BUT THE MASTER SWITCH IS NOT TURNED OFF. IT IS IMPORTANT TO STOP THE PUMP USING ITS	
C MAC C1 C2	HINE DESCRIPTION DEFINITION OF CLASS AND GROUPS INTENDED USE	UNINTENDED	the item "authorised use" is forbidden. Using the system for purposes other than those intended and indi-	<u>#</u>	SWITCH. THE PUMP RESTARTS AFTER ITS NORMAL OP- ERATING CONDITIONS HAVE BEEN RESTORED. FAILURE TO OBSERVE THE ABOVE MENTIONED RULES	
C3	HANDLING AND TRANSPORT ERAL WARNINGS	USE	cated under "Intended use" is strictly forbidden. All other uses excepting those for which the litre counter was de-	<u> </u>	CAN CAUSE SERIOUS ACCIDENTS SHOULD THE HEAT SENSOR ACTIVATE UNDER NORMAL USE	
F GEN	T AID RULES IERAL SAFETY RULES		signed and described in this manual shall be deemed "MISUSE", and consequently Piusi S.p.A. disclaims all liability for any injury caused to persons of animals or damage to things or the system itself.		CONDITIONS, PLEASE CONTACT THE TECHNICAL SUPPORT.	
G1P	HNICAL DATA ERFORMANCE SPECIFICATIONS		RICTIONS IT IS FORBIDDEN:	G TECHNIC		
	TRICAL DATA RATING CONDITIONS ENVIRONMENTAL CONDITIONS	1	To use the appliance in a construction configuration other than that contemplated by the manufacturer To use the appliance with fixed quards tampered with or removed.		RFORMANCE SPECIFICATIONS	
2 3	ELECTRICAL POWER SUPPLY DUTY CYCLE	3	To use the appliance with the galaxis tampered with the new of the second secon		rs flow rate as a function of back pressure.	
14	FLUIDS PERMITTED ALLATION	4	lowing groups : A, B, C. To integrate other systems and/or equipment not considered by the	EX50 15 GPM	titic A Typical delivery Typical delivery Typical delivery Typical delivery Typical delivery Typical delivery	
L1	POSITIONING, CONFIGURATIONS AND ACCESSORIES	5	manufacturer in the executive project. To connect the appliance up to energy sources other than those			
L2	NOTES ON SUCTION AND DELIVERY LINES	6	contemplated by the manufacturer To use the commercial devices for purposes other than those indi-	Functioning Point	Absorpt Flow (I/min)- (bar)- (bar)- 2 ft hose dispensii nozzle	PRELIMINARY INSPECTION
M CON M1 M2	INECTIONS ELECTRICAL CONNECTIONS PIPING CONNECTIONS	7	cated by the manufacturer. Do not use in case of lightnings	A - (Maximum Flow Rat	te) 15 57 - 15 0,2 - 3	
N INITI	IAL START-UP	<u> </u>	IANDLING AND TRANSPORT	B - (Base system) C - (By-Pass)	17 40 - 10,5 0,5 - 7 • • 25 0 1,1 - 16 Delivery Closed	
Q NOIS	NTENANCE SE LEVEL	handle them. The pumps are	l dimensions of the pumps, special lifting equipment is not required to carefully packed before dispatch. Check the packing when receiving	EX50 17 GPM	्रि हि मैं ति Typical delivery configuration	
S DEN	BLEMS AND SOLUTIONS 1 IOLITION AND DISPOSAL	the material and store in a dry	AL WARNINGS			
I EXPI	LODED VIEWS	Important pre-	To ensure operator safety and to protect the pump from poten-	Functioning Point	Absorptio Absorptio Flow Ra (I/min) - (₁ (/min) - (₁ (hmin) - (₁ (bar) - (₁ (bar) - (₁ (bar) - (₁ (bar)) - (₁ (bar)) - (₁ (bar)) - (₁ (bar)) - (₁)	
	MACHINE AND MANUFACTURER	cautions	tial damage, workers must be fully acquainted with this instruc- tion manual before performing any operation.	A (Maximum Flaus Dat	고 태전 전 10 12	
	DENTIFICATION	Symbols used in the manual	The following symbols will be used throughout the manual to high- light safety information and precautions of particular importance:	A - (Maximum Flow Rat B - (Base system)	17 57 - 15 0,7 - 10 • •	WARNING
			DANGER indicates a hazardous situation which, if not avo- ied will result in death or serious injury.	C - (By-Pass)	25 0 1,2 - 17.5 Delivery Closed Image: Construction of the second s	
	LISTED NO. Electric Motor for Hazardous Locations	WARNING	WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury	EX75	ວ່ອງ ໄດ້ ໂລ ເລີ configuration	
	Class I Group D L.N. Date		NOTICE is used to address pratices not related to personal injury	Functioning Point	Absorption Flow Ra (I/min) - (g (Jar) - (p (bar) - (p (bar) - (p of 1" hose of 1" hose dispensing nozzle	
12 V Insu	dc 17 A 2600 RPM 1/8 HP T.amb. -10° / +40°C lation Class F Duty min. 30 ON/30 OFF Temp. Code T4	Manual preser- vation	his manual should be complete and legible throughout. It should remain available to end users and specialist installation and main-	Punctioning Point	Abs F (1/m (b) (b) (b) (b) (b) (b) (b) (b) (b) (b)	
▲ c	AUTION: Automatic thermal protected motor / do not open when energized	Reproduction	tenance technicians for consultation at any time. This manual belongs to Piusi S.p.A., which is the sole proprietor of	A - (Maximum Flow Rat B - (Base system)	te) 15 75 - 20 0,2 - 3 20 65 - 17 0,7 - 10 · ·	
	CUUUS E 343449 EX75 12V	rights	all rights indicated by applicable laws, including, by way of exam- ple, laws on copyrights. All the rights deriving from such laws are	C - (By-Pass)	26 0 1,1 - 17.5 Delivery Closed	
	LISTED NO. Electric Motor for Hazardous Locations		reserved to Piusi S.p.A.: the reproduction, including partial, of this manual, its publication, change, transcription and notification to		The curve refers to the following operating conditions: Fluid: PETROL,	L1
0	Class I Group D L.N. Date		the public, transmission, including using remote communication media, placing at disposal of the public, distribution, marketing in any form, translation and/or processing, loan and any other		Temperature: 20° C Suction conditions: The pipe and the pump position	
12 V	dc 20 A 2600 RPM 1/4 HP T.amb. -10° / +40°C ation Class F Duty min. 30 ON/30 OFF Temp. Code T4		activity reserved by the law to Piusi S.p.A. THIS MANUAL IS VALID ONLY FOR DC PUMPS		relative to the fluid level is such that a low pressure of 0.3 bar is generated at the nominal flow rate.	
	AUTION: Automatic thermal protected motor / do not open when energized		ALWAYS USE THE RIGHT VOLTAGES TO CONNECT THE PUMPS		Under different suction conditions higher low pressure values can be created that reduce the flow rate compared	
AVAILABLE MO MANUFACTUR			 For ground-based refueling only. Do not use in or on the aircraft. 		to the same back pressure values. To obtain the best perfor- mance, it is very important to reduce loss of suction pres- sure as much as possible by following these instructions:	
	Via Pacinotti 16/A – z.i. Rangavino 46029 Suzzara - Mantova (Italy)		User should consult NFPA 407 Standard for Aircraft Fuel Servicina for safety requirements during around fuel		shorten the suction pipe as much as possible avoid useless elbows or throttling in the pipes	
~ ·			servicing of aircraft using liquid petroleum fuels. This prod- uct has no actual or implied compiance with this standard.		 keep the suction filter clean use a pipe with a diameter equal to, or areater than, 	L2
	SELF-PRIMING, VOLUMETRIC, ROTATING ELECTRIC VANE PUMP,		USE THE PUMP ONLY WITH FLUIDS PERMITTED. DO NOT USE WITH FLUIDS NOT PERMITTED TO AVOID		indicated (see Installation).	DELIVERY
MOTOR	EQUIPPED WITH BY-PASS VALVE. BRUSH MOTOR POWERED BY CONTINUOUS CURRENT, LOW VOLT-		DAMAGING THE PUMP. THE GUARANTEE LAPSES IN CASE OF MISUSE OF THE FLUID.	Y		The selection of the put The combination OF: th
	AGE, WITH INTERMITTENT CYCLE, CLOSED TYPE, IP55 PROTECTION CLASS ACCORDING TO CEI EN 60034-5, FLANGE-MOUNTED DI-		DO NOT USE THE PUMP WITH LIQUID FOOD PRODUCTS AND/OR WATER-BASED FLUIDS.	(l/min.)	A ● B	could create back press pump's electronic cont
A war	RECTLY TO THE PUMP BODY. MOTOR EQUIPPED WITH AUTOMATIC THERMAL OVER-		DO NOT OPERATE THE PUMP DRY TO AVOID DAMAGE. Before connection, make sure that the piping and the	ø		In these cases, to guara the system using pipes
- WARI	NING LOAD PROTECTION. SHOULD THE PROTECTION ACTIVATE, TURN OFF THE PUMP AND WAIT FOR IT TO COOL DOWN.		suction tank are free of dirt and solid residue that could damage the pump and its accessories. NEVER COLLECT THE FLUID FROM THE BOTTOM OF THE TANK SINCE IT			smaller resistances (e.g.
C1	DEFINITION OF CLASS AND GROUPS Definition of class and groups		MAY CONTAIN IMPURITIES BEFORE USING THE PUMP SWITCH OFF ALL THE ELEC-		\backslash	Self-priming pumps are During the start-up pha
CLASSI	Flammable gases, vapors or liquids		TRONIC DEVICES (I.E. MOBILE PHONES, BEEPERS ETC.)		\backslash_{c}	pump unit is able to such It is important to note the
\checkmark		E FIRST A	ID RULES	٥L	P (bar) X	automatic dispensing no ing released and, therefo
CLASS II	Combustible dusts	Contact with	In the event of problems developing following EYE/SKIN CONTACT, INHALATION or INGESTION of the treated product, please refer to	H ELECTRIC	CAL DATA	pump without an auton Always install a foot valv times. In this way, the pu
		the product Persons who	the SAFETY DATA SHEET of the fluid handled. Disconnect the power source, or use a dry insulator to protect yourself	PUMP MODEL	POWER SUPPLY CURRENT Voltage (V) Frequency (Hz) Max (*) (A)	eration, the pump can of pump may begin to cavi
		have suffered electric shock	while you move the injured person away from any electrical conduc- tor. Avoid touching the injured person with your bare hands until he is	EX50 EX75	12 DC 25 12 DC 26	In light of this, it is impor diameters that are equa
	Ignitable fibers & flyings		far away from any conductor. Immediately call for help from qualified and trained personnel. Do not operate switches with wet hands.	(*) Refers to functioning in by-p		filters with a large cross-s important to keep the su
X			Please refer to the safety data sheet for the product	POWER CORD INPUT POWER CORD EX50	1/2" NPT Minimum section recommended for cables up to 6 m:	of the system. The vertical distance bet the 2m maximum requi
GROUP A	Acetylene	SMOKING PROHIBITED	DO NOT SMOKE NEAR THE PUMP AND DO NOT USE THE PUMP NEAR FLAMES.		2.5 MM/2 or 12 AWG. Recommended sheath: H07RN-F T90°; SJT T90°; AWM Syle 21179 T80°	suction pipes to fill up ar installed if the vertical dis
		Ŵ		POWER CORD EX75	Minimum section recommended for cables up to 6 m: 12 AWG. Recommended sheath: H07RN-F T90°; SJT T90°; AWM Syle 21179 T80°	
GROUP B	Flammable gas, flammable liquid-produced vapor, or combustible liquid-pro-	F GENERA	AL SAFETY RULES	I OPERATI	NG CONDITIONS	
	riammable gas, nammable liquid–produced vapor, or combusuble liquid–pro- duced vapor mixed with air that may burn or explode, having either a maximum experimental	ISER'S RESPONSIBIL- ITY	THE INFORMATION CONTAINED IN THIS MANUAL.		IVIRONMENTAL CONDITIONS	
X	safe gap (MESG) value less than or equal to 0.45 mm or a minimum igniting current ratio (MIC ratio) less		SAFETY SPECIFICATIONS FOR FLAMMABLE LIQUIDS. Ensure that all equipment operators have access to	AMBIENT TEMPERATURE	min. +23 °F / max +104 °F min10 °C / max +40 °C	
GROUP C	than or equal to 0.40. Flammable gas, flammable liquid-produced vapor, or combustible liquid-pro-		adequate instructions concerning safe operating and maintenance procedures.	FLUID TEMPERATURE	min. +23 °F / max +104 °F min10 °C / max +40 °C	
	duced vapor • Mixed with air that may burn or explode, having either a maximum experimen- tal safe gap (MESG) value	Essential protective	IN CASE OF CONTACT WITH THE PRODUCT AND FOR GOOD STAN- DARD OF BEHAVIOUR, wear protective equipment which is:	RELATIVE HUMIDITY	max. 90%	L
	tal safe gap (MESG) value Greater than 0.45 mm and less than or equal to 0.75 mm, or a minimum igniting current ratio (MIC ratio)	equipment characteristics	 suited to the operations that need to be performed; resistant to products used 	LIGHTING	The environment must conform to directive 89/654/EEC on work environments.	MCON
GROUP D	Greater than 0.40 and less than or equal to 0.80. Flammable gas, flammable liquid–produced vapor, or combustible liquid–pro-		TO DO SO, PLEASE REFER TO THE RELEVANT TECHCNICAL DATA- SHEETS OF THE FLUID USED.		In case of non-EU countries, refer to directive EN ISO 12100-2 § 4.8.6.	M1
	 duced vapor Mixed with air that may burn or explode, having either a maximum experimen- 	Personal pro- tective equip- ment that must	Safety shoes Close-fitting clothing	WARNING	The temperature limits shown apply to the pump components and must be respected to avoid possible	WARNING
\checkmark	tal safe gap (MESG) value Greater than 0.75 mm or a minimum igniting current ratio (MIC ratio) greater than 0.90	ment that must be worn	Safety shoes Close-fitting clothing		damage or malfunction.	
CLASSI	than 0.80.	N	Protection gloves Safety goggles	0	ECTRICAL POWER SUPPLY The pump must be powered by DC line, the nominal	
		Necessary safety dovices	Instructions manual		values of which are indicated on the table in the paragraph "I - ELECTRICAL DATA".	
GROUP D	GROUP A GROUP B	devices Protective	Prolonged contact with the treated product may cause skin irrita-		The maximum acceptable variations from the electri- cal parameters are:	
	GROUP C	gloves	tion; always wear protective gloves during dispensing.		Voltage: +/- 5% of the nominal value Power supply from lines with values that do not fall within the indicated limits could cause damage to the	
			TO PREVENT ELECTRIC SHOCK AND DETONATION OF SPARKS, ALL PUMPING SYSTEM MUST HAVE PROPER	WARNING	within the indicated limits could cause damage to the ELECTRICAL AND electronic components.	
			GROUNDING, INCLUDING TANK AND ANY ACCESSORIES. ENFORCE REGULATIONS FOR ELECTRICAL INSTALLATION	DU	JTY CYCLE	
		WARNING	ALL WIRING AND ELECTRICAL CONNECTIONS MUST BE PER- FORMED BY AUTHORIZED AND SUITABLY TRAINED PERSONNEL.		The pumps have been designed for intermittent use and a duty cycle of 30 min. ON and 30 min. OFF in conditions of maximum A. TEMPERATURE (40 °C) AND	
			Never touch the electric plug or socket with wet hands. Do not switch the dispensing system on if the network		AT NOMINAL TRANSFER CONDITIONS. Functioning under by-pass conditions is only allowed	A
			connection cable or important parts of the apparatus are damaged, such as the inlet/outlet pipe, nozzle or	WARNING	for short periods of time (max. 3 minutes).	

afety devices. Replace the damaged pipe immediately.

he electrical connection between the plug and socke

THE PUMP IS EQUIPPED WITH CURRENT-SENSING PROTEC-TION. IF IT ACTIVATES TURN OFF THE PUMP IMMEDIATELY.

must be kept well away from water.

WARNING

ENGLISH (Translated from Italian)

FLUIDS PERMITTED THE PUMP CAN BE USED ONLY WITH THE FOLLOW-ING FLUIDS: - DIESEL - KEROSENE - PETROL - PETROL ALCOHOL MIXED MAX 15% - AVGAS 100/100LL (PUMP ONLY) - JET A / A1 (PUMP ONLY) - ASPEN2/4 THE AVIO-FUELS COMPATIBILITY IS RELATED ONLY THE AVIO-FUELS COMPATIBILITY IS RELATED ONLY TO THE PUMP AND NOT TO OTHER COMPONENTS INCLUDED (FX, FILTER, COUNTER, NOZZI E, HOSES, etc.) (Ex. FILTER,COUNTER,NOZZLE,HOSES etc.)

TALLATION

BEFORE ANY OPERATION, ENSURE TO BE OUT OF PO-TENTIALLY EXPLOSIVE AREAS The pump must never be operated be tion lines have been connected TIGHTEN THE ELECTRICAL BOX TO ENSURE PROTECTION AGAINS THE RISK OF EXPLOSION. THE RIGHT CLAMPING SCREWS COUPLE THAT GRANTS THIS PROTECTION IS 10Nm (88,5 Lbf • in). - Verify that all components are present. Request any m

manufacturer. Check that the pump has not suffered any damage during transport or storage. Carefully clean the suction and delivery inlets and outlets, removing any dust or other packaging material that may be present.
 Check that the electrical data corresponds to those indicated on the data plate.

 Install the pump at a height of min. 80 cm.

 IF VALVES IN THE CIRCUIT ARE TO BE INSTALLED, MAKE SURE THEY ARE EQUIPPED WITH OVERPRES-SURE SYSTEM.

CLEAN THE TANK AND MAKE SURE IT IS WELL-VENTILATED (RECOMMENDED OPENING PRESSURE: 3 psi) APPLY THE QUICK COUPLING TO THE TANK CORRECT LY AND SAFELY

DO NOT BLOCK THE DRAINAGE HOLES

F THE PUMP IS TO BE INSTALLED IN HAZARDOUS CLASSIFIED) LOCATION, IT MUST BE INSTALLED BY A ICENSED ELECTRICIAN AND CONFIRM TO NATIONAL FIRE PROTECTION ASSOCIATION (NFPA) CODES 30 AND 70 OR CSA 22.1. YOU AS THE OWNER , ARE RESPONSI-BLE FOR SEEING THAT INSTALLATION AND OPERATION OF YOUR PUMP COMPLIES WITH NFPA CODES AS WELL AS ANY APPLICABLE STATE AND LOCAL CODES. RIGID CONDUI MUST BE USED TO INSTALL WIRING. NOTE THAT THE LEAD WIRES ARE FACTORY-SEALED ISOLAT-ING THE MOTOR FROM THE JUNCTION BOX. FAILURE TO FOLLOW THESE WIRING INSTRUCTIONS MAY RESULTS IN DEATH OR SERIOUS INJURY FROM HOCK, FIRE OR EXPLOSION.

POSITIONING, CONFIGURATIONS AND ACCESSORIES

The pump must be secured in a stable manner. It is the installer's responsibility to provide the line accessories necessary for the safe and proper functioning of the pump. The accessories that are not suitable to be used with the previously indicated material could damage the pump and/or cause injury to persons, as well as causing pollution.

To maximise performance and prevent damage that could affect pump operation, always demand original accessories. NOTES ON SUCTION AND DELIVERY LINES

ump model must be made taking into account the characteristics of the system. the length of the pipe, the diameter of the pipe, as well as the accessories installed, ssure that are greater than the maximum predicted pressure, thereby causing the trols to intervene and reducing the dispensed flow considerably.

antee correct operation of the pump, it is necessary to reduce the resistance of es that are shorter or that have a greater diameter, as well as line accessories with g. an automatic dispensing nozzle with greater flow rate capacity).

e characterized by excellent suction capacity. nase, when the suction pipe is empty and the pump is wet with the fluid, the electric k liquid from a maximum vertical distance of 2m.

that it could take up to 1 minute for the pump to prime and that the presence of an nozzle on the delivery side will prevent the air trapped during the installation from be-fore, the correct priming of the pump. For this reason, it is always advisable to prime the

omatic delivery nozzle, verifying the proper wetting of the pump. alve to prevent the suction pipe from being emptied and to keep the pump wet at all unp will always start up immediately the next times it is used. When the system is in op-operate with back pressures of up to 0.5 bars on the suction inlet; beyond this point, the vitate resulting in a drop of the flow rate and an increase in the noise levels of the system. ortant to guarantee small back pressures on the suction side, by using short pipes with al to or larger than those recommended, reducing bends to a minimum, and using -section and foot valves with minimum possible resistance on the suction side. It is very suction filters clean because, when they become clogged, they increase the resistance

etween the pump and the fluid must be kept as short as possible, and it must fall within juired for priming. If the distance is greater, a foot valve must be installed to allow the and the diameter pipes must be larger. It is however recommended that pump not be listance is greater than 3m.

If the suction tank is higher than the pump, an anti-siphon valve should be installed to prevent accidental fuel leaks. Di-mension the installation in order to control the back pressures due to water hammering It is a good system practice to install vacuum and air press gauges right at the inlets and outlets of the pump, which allow verification that operating conditions are within anticipated limits. To prevent the suction pipes from being emptied when s. a foot valv

THE INSTALLER IS RECOMMENDED TO INSTALL A

NECTIONS

SUCTION FILTER.

ELECTRICAL CONNECTIONS


BEFORE ANY OPERATION, ENSURE TO BE OUT OF PO-TENTIALLY EXPLOSIVE AREAS IT IS THE INSTALLER'S RESPONSIBILITY TO CARRY OUT THE ELECTRICAL CONNECTIONS IN COMPLIANCE WITH THE RELEVANT STANDARDS.

FOR INSTALLATION IN UNCLASSIFIED AREAS, THE SUPPLI ER POWER CORD AND STRAIN RELIEF GRIP MAY BE USED THESE COMPONENTS HAVE NOT BEEN EVALUATED AS PART OF THE UL LISTED EQUIPMENT AND ARE NOT IN-TENDED FOR USE IN HAZARDOUS (CLASSIFIED) LOCATION. Comply with the following (not exhaustive) instruct tions to ensure a proper electrical connection:

- During installation and maintenance make sure that power supply to the electric lines has been turned off. Use cables with minimum sections, rated voltages and installation type that are suitable for the characteristics indicated in paragraph "I-ELECTRICAL DATA" and the installation environment.

Always make sure that the cover of the terminal strip box is closed before switching on the power supply, after having checked the integrity of the seal gaskets that ensure the IP55 protection grade. For those screws use a 10 nm clamping couple

All motors are equipped with a grounding terminal. Make sure all the plant is properly grounded. BE SURE TO USE A CABLE GLAND, WITH SUFFICIENT PROTECTION GRADE (Exd)



PRELIMINARY

INSPECTION

Ν

FOREWORD

NOTICE

IF THE PUMP


DOES NOT PRIME

AT THE END OF

THE INITIAL START-UP

USE

taken

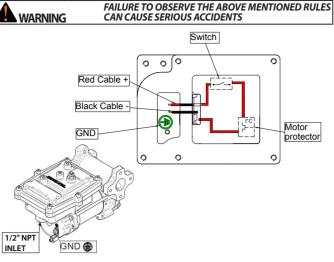

ENGLISH (Translated from Italian)

IN THE EVENT OF INSTALLATION IN ZONES WHICH ARE NOT CLASSIFIED, IT IS SUFFICIENT TO OBSERVE THE

MINIMUM SAFETY STANDARDS ALREADY MENTIONED

PIPING CONNECTIONS M2

FOREWORD - Before carrying out any connection, refer to the visual indications i.e. arrow on the pump head, to identify suction and delivery. Wrong connection can cause serious pump damage.

> Before connection, make sure that the piping and the suction tank are free of dir and solid residue that could damage the pump and its accessories. NEVER COLLECT THE FLUID FROM THE BOTTOM OF THE TANK SINCE IT MAY CONTAIN IMPURITIES Before connecting the delivery pipe, partially fill the pump body, from deliv- evide contracting the control pipe, particulty in the participant of participant of the priming.
> Do not use conical threaded fittings, which could damage the threaded inlet or outlet openings of the pump if excessively tightened.

INITIAL START-UP

- Check that the quantity of fluid in the suction tank is greater than the amount you wish to transfer. - Make sure that the residual capacity of the delivery tank is greater than the

quantity you wish to transfer. Make sure that the piping and line accessories are in good condi THIS PUMP IS NOT PROVIDED FOR FURTHER REGULA-

TION OF DELIVERY AND PRESSURE Fluid leaks can damage objects and injure persons.

Never start or stop the pump by connecting or cutting out the power supply. - Prolonged contact with some fluids can damage the

skin. The use of goggles and gloves is recommended. Depending on the system characteristics, the priming phase can ast from several seconds to a few minutes. If this phase is prolonged, stop the pump and verify:

that the pump is not running completely dry (fill with fluid from the delivery line);

- that the suction pipe guarantees against air infiltration;
 that the suction filter is not clogged;
- that the suction height is not higher than 2 mt. that all air has been released from the delivery pipe.
- When priming has occurred, verify that the pump is operating

within the anticipated range, in particular: - that under conditions of maximum back pressure, the power absorption of the motor stays within the values shown on the

identification plate; - that the delivery back pressure does not exceed the maximum back pressure for the pump.

O EVERY DAY USE

1 If flexible pipes are used, attach the ends of the piping to the tanks. In PROCEDURE the absence of an appropriate slot, solidly grasp the delivery pipe before beginning dispensing. Before starting the pump make sure that the delivery valve is closed 2

- (dispensing nozzle or line valve) Turn the ON/OFF switch on Open the delivery valve, solidly grasping the pipe
- While dispensing, do not inhale the pumped product IF ANY TREATED FLUID LEAKS OUT DURING DISPENSING, TAKE ALL STEPS NECESSARY TO ENSURE THE LEAKED FLUID IS CLEANED UP AND
- SAFE AS SPECIFIED ON THE PRODUCT TECHNICAL SHEET. Close the delivery valve to stop dispensing

When dispensing is finished, turn off the pump THE WORKING OPERATIONS MUST ALWAYS BE GUARDED BY THE OPERATOR. The by-pass valve allows functioning with delivery closed only for short periods (max. 3 minutes). To avoid damaging the pump, after use, make sure the pump is off. In case of a power break, switch the pump off straight away.

Should any sealants be used on the suction and delivery circuit of the pump, make sure that these products are not released inside the pump. Foreign bodies in the suction and delivery circuit of the pump could cause malfunctioning and breakage of the pump components.

MAINTENANCE

Safety instruc- The PUMP IS DESIGNED AND CONSTRUCTED TO require a minimum of maintenance. Before carrying out any maintenance work, DISCONNECT THE PUMP from any electrical and hydraulic power source. During maintenance, the use of personal protective equipment (PPE) is compulsory In any case always bear in mind the following basic recommendations for a

good functioning of the pump BEFORE ANY OPERATION, ENSURE TO BE OUT OF PO-TENTIALLY EXPLOSIVE AREAS FOR SAFETY REASONS IT'S NOT ALLOWED TO DISASSEMBLE THESE PARTS : WARNING (1) BOTTOM (2) MOTOR PIPE (3) PUMP BODY FOR SAFETY REASONS IT IS FORBIDDEN TO REMOVE THE PARTS "BOTTOM PLATE" (1), "MOTOR TUBE" (2)

AND "PUMP BODY" (3). All maintenance must be performed by qualified personnel. Tampering can lead to performance degradation, danger to persons and/or property and Authorised maintenance may result in the warranty and UL/ATEX CERTIFICATION being voided. personnel Check that the labels and plates found on the dispensing system do not dete Measures to be riorate or become detached over time. ONCE A WEEK: - Check that the pipe connections are not loose to prevent any leaks: - Check and keep the filter installed on the suction line clean. ONCE A MONTH: - Check the pump body and keep it clean and free of any impurities; - Check that the electrical supply cables are in good condition.

Q NOISE LEVEL

ENGLISH (Translated from Italian)

Under normal operating conditions, noise emission of all models does not exceed 74 dB at a distance of 1 metre from the electric pump.

R PROBLEMS AND SOLUTIONS

or any problems contact t	he authorised dealer nearest to you.			
PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION		
	Lack of electric power	Check the electrical connections and the safety systems.		
THE MOTOR IS NOT FURNING	Rotor jammed	Check for possible damage or obstruction of the rotating components.		
	Motor problems	Contact the Service Department		
THE MOTOR TURNS SLOWLY WHEN STARTING		Bring the voltage back within the anticipated limits		
	Low level in the suction tank	Refill the tank		
	Foot valve blocked	Clean and/or replace the valve		
	Filter clogged	Clean the filter		
	Excessive suction pressure	Lower the pump with respect to the level of the tank or increase the cross-section of the piping		
	High loss of head in the delivery circuit (working with the by-pass open)			
LOW OR NO FLOW RATE	By-pass valve blocked	Dismantle the valve, clean and/or replace it		
	Air entering the pump or the suc- tion piping	Check the seals of the connections		
	A narrowing in the suction piping	Use piping suitable for working under suction pressure		
	Low rotation speed	Check the voltage at the pump. Adjust the voltage and/or use cables of greater cross-section		
	The suction piping is resting on the bottom of the tank	Raise the piping		
	Cavitation occurring	Reduce suction pressure		
NCREASED PUMP NOISE	Irregular functioning of the by- pass	Dispense until the air is purged from the by-pass system		
	Presence of air in the fluid	Verify the suction connections		
LEAKAGE FROM THE PUMP BODY	Seal damaged	Check and replace the seal		
	Suction circuit blocked	Remove the blockage from the suction circuit		
THE PUMP DOES NOT	Malfunction of foot valve fitted on suction circuit	Replace foot valve		
PRIME THE LIQUID	The suction chambers are dry	Add liquid from pump delivery side		
	The pump chambers are dirty or blocked	Remove the blockages from the suction and delivery valves		
THE HEAT SENSOR ACTIVATES UNDER NORMAL OPERATING	Operating fault	Contact the technical support		

<u>S</u>

industrial waste and, in particular: he packaging consists of biodegradable cardboard which can be delivered to companies for normal recycling of cellulose.

European Directive 2012/19/EU requires that all equipment marked with


regarding the product must not be disposed of together with normal household waste. It is the responsibility of the owner to dispose of these products as well as other electric or electronic equipment by means of the specific refuse collection structures indicated by the government or the local governing authorities.

Disposing of RAEE equipment as household wastes is strictly forbidden. Such wastes must be disposed of separately.

defined by the laws in force.

industrial waste.

T EXPLODED VIEWS

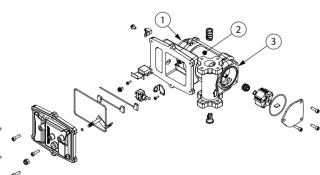



EN. This doc nt has been drawn upwith the greatest attention t FR. Ce document a été rédigé avec la plus grande attention quant' 'exactitude des données qu'il contient. PIUSI S.p.A. n'assume aucu



ONDITIONS DEMOLITION AND DISPOSAL If the system needs to be disposed, the parts which make it up must be delivered to companies that specialize in the recycling and disposal of Foreword Disposing of pack ing materials Metal Parts Metal parts, whether paint-finished or in stainless steel, can be con-Disposa

signed to scrap metal collectors. Disposal of elec-These must be disposed of by companies that specialize in the dispose tric and electronic of electronic components, in accordance with the indications of directive 2012/19/EU (see text of directive below). components

Informathis symbol on the product and/or packaging not be disposed of together with non-differentiated urban waste. The symbol indicates that this

In case of the unlawful disposal of said wastes, fines will be applicable as


Other components, such as pipes, rubber gaskets, plastic parts and wires, must be disposed of by companies specialising in the disposal of

ment for clients residing

tion

Any hazardous substances in the electrical and electronic appliances and/or the misuse of such appliances can have potentially serious conse quences for the environment and human health.


S





ISTED.

MADE Use and maintenance TTAL

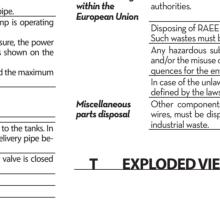



protector





